



Motion Detector

INSTRUCTION MANUAL

Specially designed for deaf and hearing impaired people.





All your products are already connected to each other.

Summary :

- 4 :** The contents of your package
- 5-8 :** Motion detector

The contents of your package



(A)



(B)



(C)



(D)


(A) - Motion detector

(B) - Base

(C) - Battery


(D) - Manual instruction in english

Motion detector

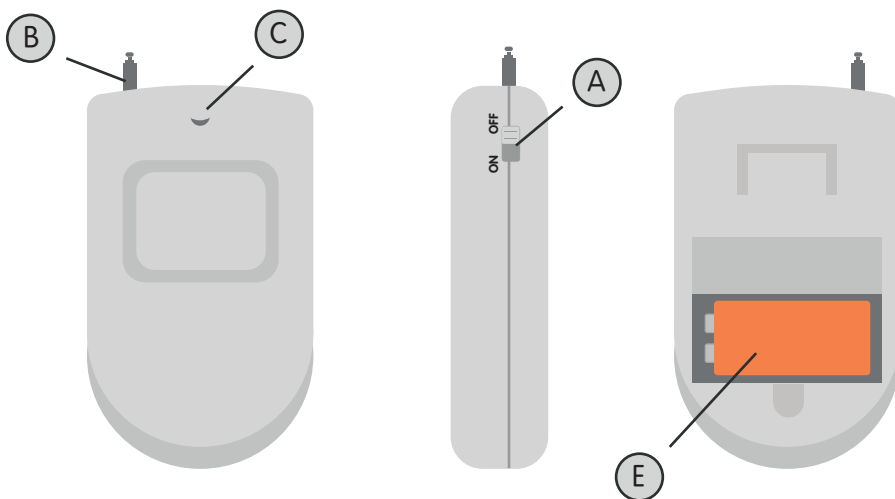

- (A) - ON / OFF button
- (B) - Antenna
- (C) - Detection area

- (D) - Base
- (E) - Battery

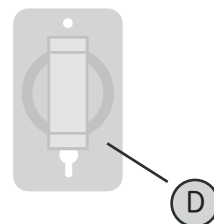

Technical Specifications

Easy and simple installation

Wireless device

Distance between each detector: 12 meters maximum in free fields

Quantity of detectors connected: 20 units max.

Radio frequency : 433Mhz

Power supply: 6F22 9V Battery included

Size :

Weight:

Distance between the motion detector and Jenile's receiver: ... meters maximum in free fields

2-years guarantee

Introduction

These motion detectors are designed to be used with Jenile wireless receivers. The motion detectors are designed to continuously monitor your home inside and out. They detect movements from intruders in the protected area and transmit the information to your alarm system and/or flash receivers or Jenile vibrators. The protected area is limited to the walls of the room in which they are fixed.

N.B: Please note that the motion detectors also detect animals. Make sure your animals don't get access to the equipped areas when the system is switched on.

Recommended locations:

The motion detector can be installed inside or outside.

- Indoor installation:

The motion detector must be installed at a height between 2m and 2.5m above the floor level. At this height, the detector will have a maximum coverage of 12 meters and a coverage angle of 110.

1. Do not orientate the detector towards a window or directly exposed to the sunlight.

Detectors are not designed for a use in greenhouses.

2. Do not place the detector in a location where it will be exposed to a fan.

3. Do not place the detector directly above a heat source (e.g: fire, heater, water heater etc.)

4. If possible, and in order to ensure detection of an intruder, place the detector in a location where the intruder would logically cross the detection field

5. Do not place the detector in places with excessive vibrations

- Outdoor installation:

Same recommendation as for the indoor installation.

Place the motion detector under a shelter to avoid humidity.

1. Screw the detector base to the wall with the provided screws and dowels.
2. Pull out the antenna for a maximum reach to the Magic Cube
3. Push the "on" button
4. Slide the detector on its base

Specific case:

If you are in possession of an alarm unit and several motion detectors, you can link every detector to one different diode. So that when the alarm triggers, you can directly know the source. For example, 1 diode for the outdoor motion detector / 1 diode for the indoor motion detector

Tests


After the installation, the detector is automatically linked to the flash systems and to the Jenile vibrators. Warning, if you press too long on the CBM Cube's plug, it will be disconnected.

Precautions for use


1. Clean the detector with a soft brush every six months to ensure a smooth functioning of the product. Warning, remove the battery before cleaning.
2. For various reasons, be aware of environmental conditions' changes. The modification of the environment could have an impact on the product's performance. We suggest to our users to take all the necessary precautions for the protection of your family and house.

Signals and colors


The Motion Detector DDM13 can be used with all the receivers from the Jenile range.

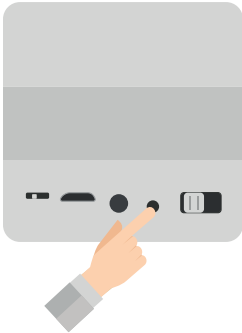

If you need to be alerted to the motion detector, the cube, the flash plug, will turn white.

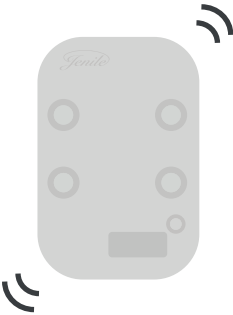

The pocket vibrator has 4 vibrations with 4 repetitions

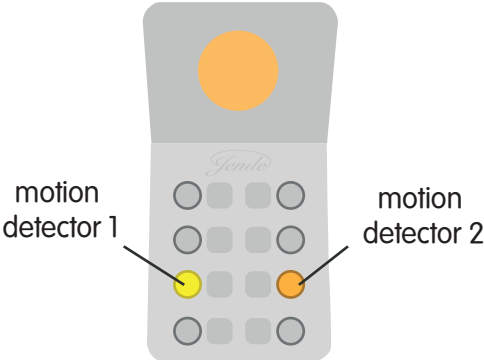

If you choose to equip yourself with several motion detectors you can also differentiate the alerts thanks to the fixed flash 8 diodes



www.jenile.com

