


# Door opening detector

## INSTRUCTION MANUAL

Specially designed for deaf and hearing impaired people.

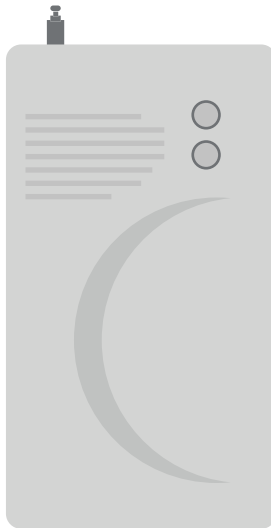




All your products are already connected to each other.

# Summary :

- 4 :** The contents of your package
- 5-11 :** Door opening detector

# The contents of your package

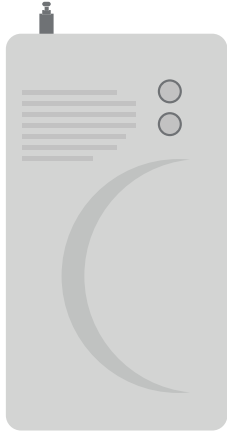

(A)



(B)




(C)



(D)

- (A) - Door opening detector
- (B) - Double sided adhesive
- (C) - Battery
- (D) - Manual instruction in english

# Door opening detector

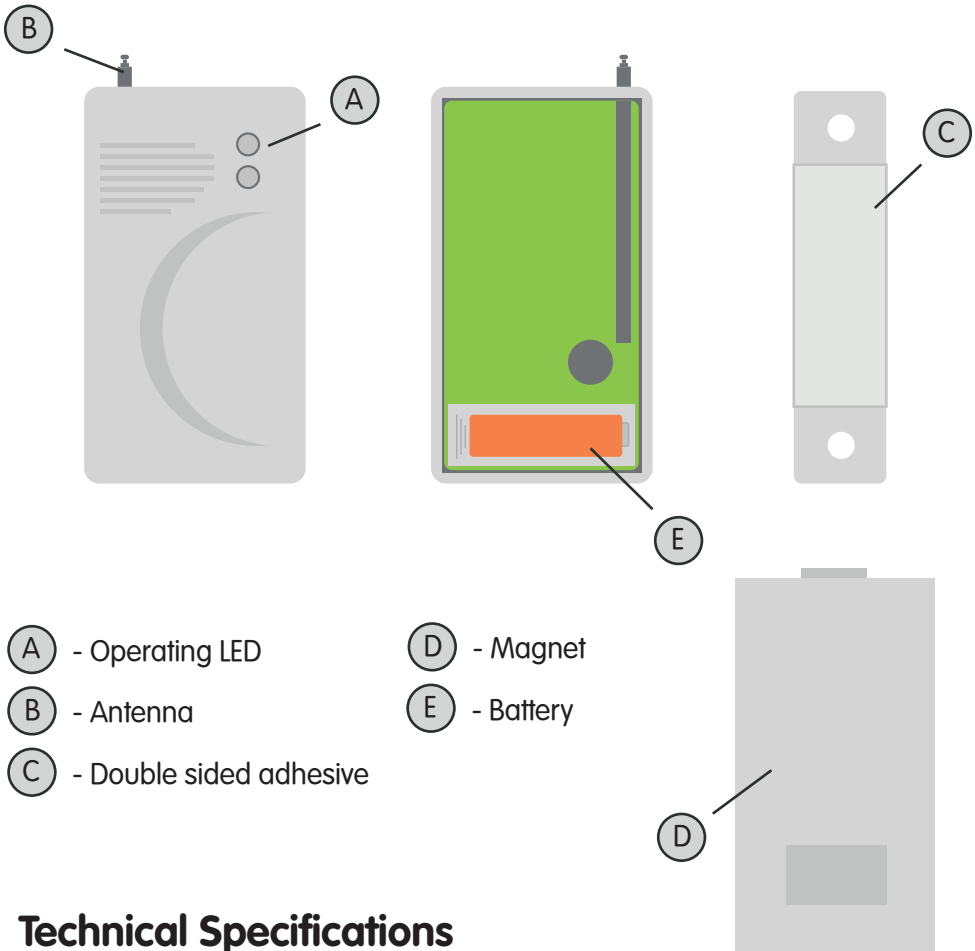

(A) - Operating LED

(D) - Magnet

(B) - Antenna

(E) - Battery

(C) - Double sided adhesive

## Technical Specifications

Easy and simple to install

Dimensions (height x width x depth): 67 x 37 x 12 mm

Power supply: 12V battery included

Battery autonomy: 6 months

Transmission frequency: 433,33 Mhz

Distance between each detector: 150 meters maximum in free fields

2-year guarantee

## **Introduction**

The door opening detector DOF13 is designed to be used with at least one Jenile's flash device or vibrator.

The door opening detector is composed of two items: one detector and one magnet. The two items of the detector have to be fixed on doors or windows with the magnet on one side and the detector on the other (depending on the swing direction of the door: either on the door frame or on the door itself).

The radio-frequency pulses (433 MHZ) are transmitted wireless to the Jenile flash receivers or vibrators.


## **Setting**

Please refer to your Jenile flash device instruction manual to connect devices to one another. If the connection fails, please contact our customer service department.

After the installation, the detector is automatically linked to the flash systems and to the Jenile vibrators. Warning, if you press too long on the CBM Cube's plug, it will be disconnected.

# Installations


The door opening detector DOF13 has to be placed indoors, vertically or horizontally, on a door, a window or a bay window. The detector (the main part of the device) has to be located on a stable door jamb or window and the magnet has to be positioned on the opening and moving part of it.

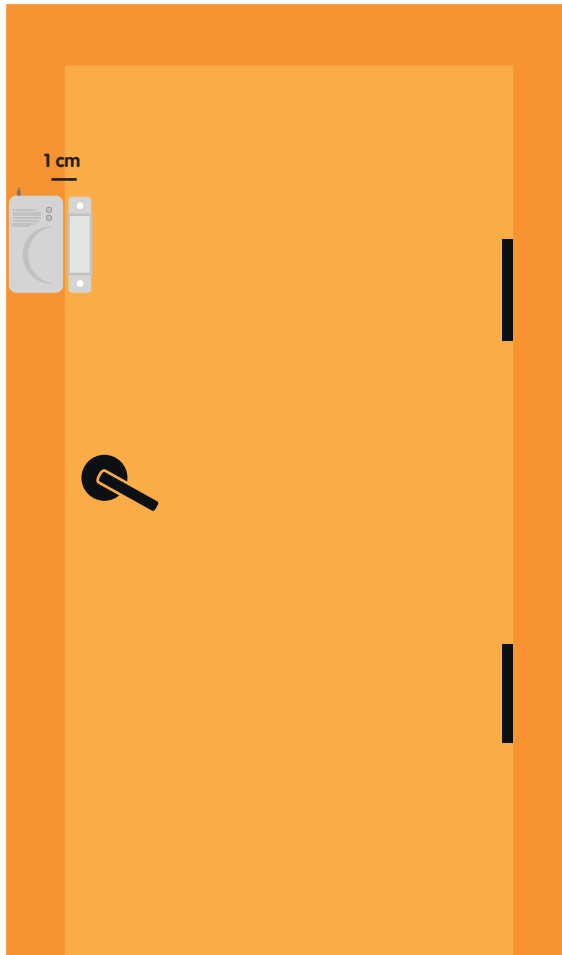

The two items of the device must be aligned and the maximum deviation between them must not exceed 1 cm. (It is sometimes adequate to add wedges – these wedges are not provided).


If the detector has to be installed on a PVC/aluminum door or window, it is not recommended to drill them so as to keep the isolation.

Note : The detector's LED must flash to each opening of the door or the window.

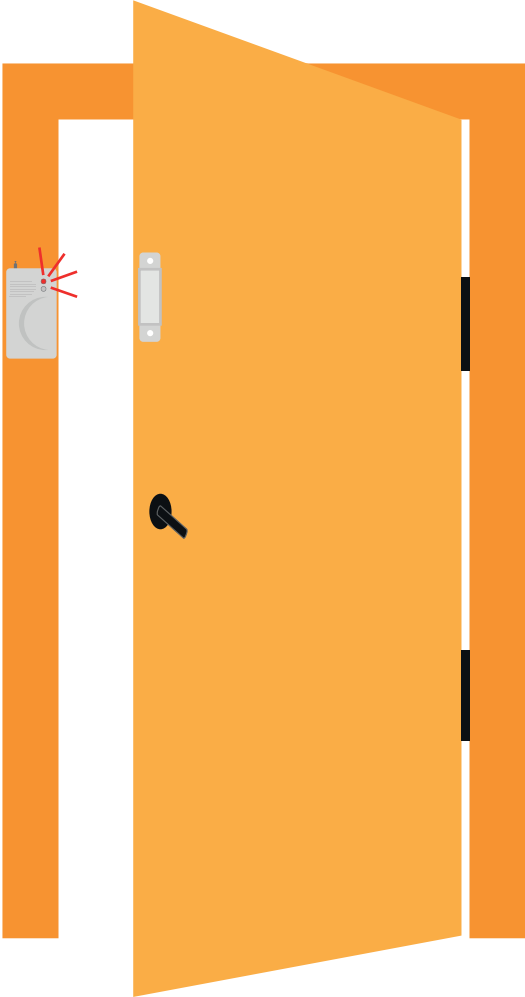




If it doesn't, please check that the distance between the two items is inferior to 1 cm and/or put the main part of the device (with the battery) the other way round (180 rotation)

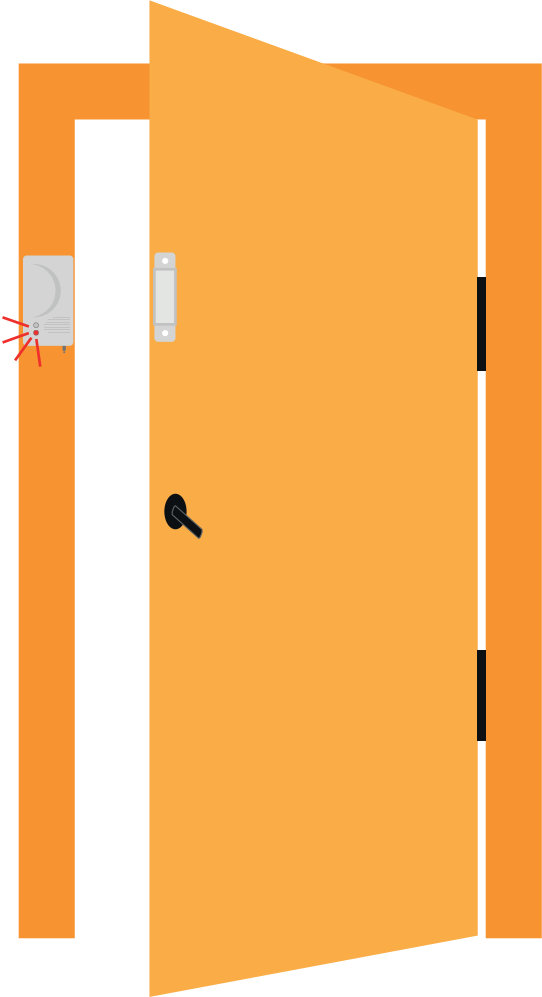


# Signals and colors


The Motion Detector DDM13 can be used with all the receivers from the Jenile range.

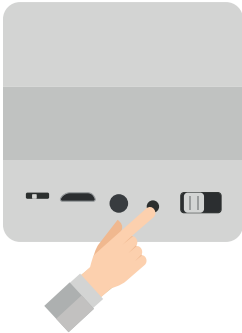

If you need to be alerted to the dooropening detector, the cube, the flash plug,will turn white.

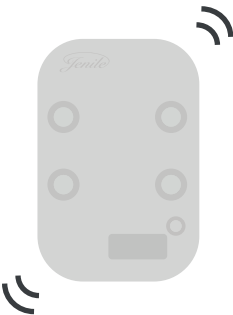

The pocket vibrator has 4 vibrations with 4 repetitions

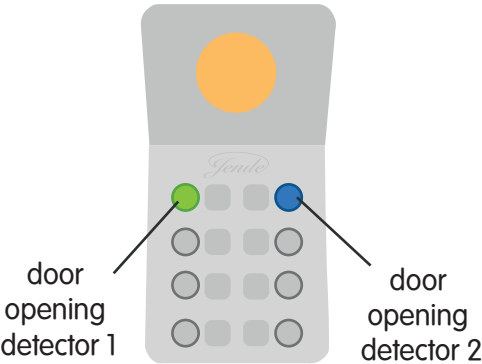

If you choose to equip yourself with several door opening detectors you can also differentiate the alerts thanks to the fixed flash 8 diodes

## **Safety & environment**

Please respect the use and maintenance instructions. To clean the detector, only use a soft and slightly damp cloth.

Never use abrasive or corrosive products.

The detector must not come into contact with any liquid.

Prior to an extended period without use, please remove the battery.

As a consumer, you are legally obliged to recycle used batteries. It is forbidden to throw them in ordinary garbage as they contain toxic chemical that can affect the health and the environment. Use the means of selective collections made available by your city.

Keep the batteries out of the reach of children. Do not burn or recharge the battery.  
Risk of explosion.



[www.jenile.com](http://www.jenile.com)

