


Video Doorphone

INSTRUCTION MANUAL

Specially designed for deaf and hearing impaired people.

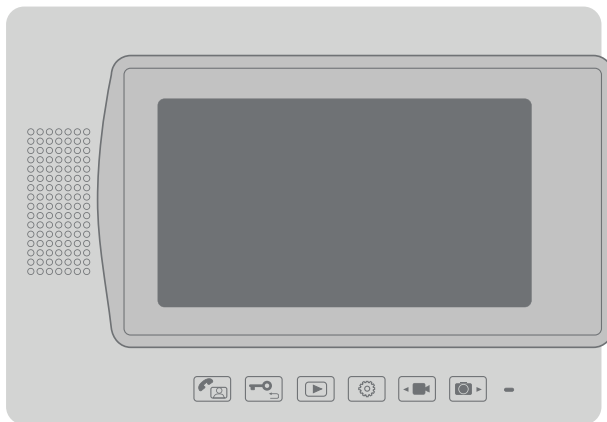




All your products are already connected to each other.

Summary :

- 4 :** The contents of your package
- 5-14 :** Video Doorphone


The contents of your package

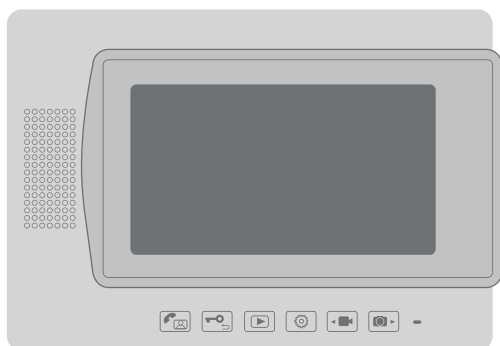


(A)



(B)

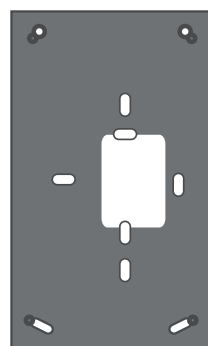

(C)

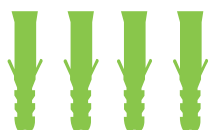

(D)



(E)



(F)



(G)

(A) - Video Doorphone

(B) - Video Doorphone

(C) - Support


(D) - 4 pegs

(E) - 4 screw

(F) - Power cable

(G) - Manual instruction in english

Video Doorphone

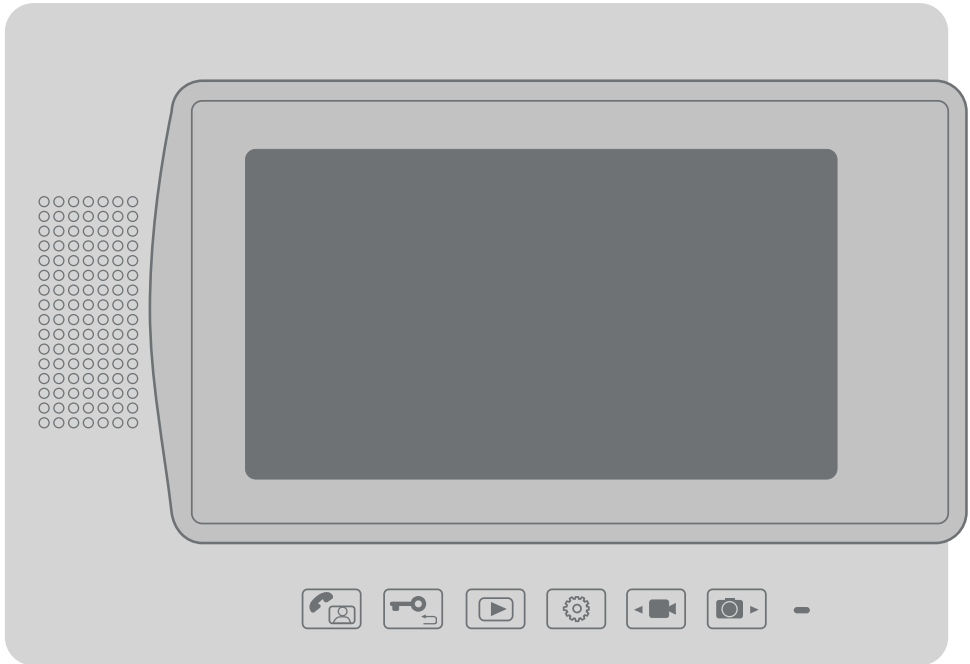

Indoor unit

LCD size : 7.0 inch (16 : 9)

Resolution : 800(H)RGB x 480 (V)

Dot pitch : 0.1926(H) x 0.1790 (V) mm

Module size : 164.9 x 100 x 2.8mm

Indoor unit installation



Technique parameter

Adapter input voltage : AC100-240V 50Hz-60Hz

Adapter output voltage current : DC15V 1500Ma



TALK TIME DELAY/ 90 =10÷

Monitor time delay : 30S +10%

Dissipation : stand ba <0.5W, Working Temperature : -35 C- 55 C

Relative humidity : 10%-90% (RH)

Ring settings :

Long time press on button  until you hear the ringtone, again to press the same button, it goes to the next ringtone, confirm by pressing the  button after ringtone is been selected

Brightness, contrast and color adjustment :

First press on button  , screen on AVI

Then long press on button  , screen showing BRIGHT

Increase by pressing button 

Decrease by pressing button 

Then again press on button  , screen showing CONTRAST

Increase by pressing button 

Decrease by pressing button 

Last time again press on button  , screen showing COLORAST

Increase by pressing button 


Decrease by pressing button 

Setting data will be saved automatically after 3 seconds.


Monitoring switched.

First press on button  , screen on AVI, the outdoor unit camera turn on.

Intercommunication function between indoor monitor :

Without calling from the outdoor unit, press  to start intercom (monitor showing blue screen, and rang the bell), if someone calls from the outdoor unit, the screen will switch to the camera view of the outdoor unit.

Monitor with Picture \ Video memory, setting and functioning

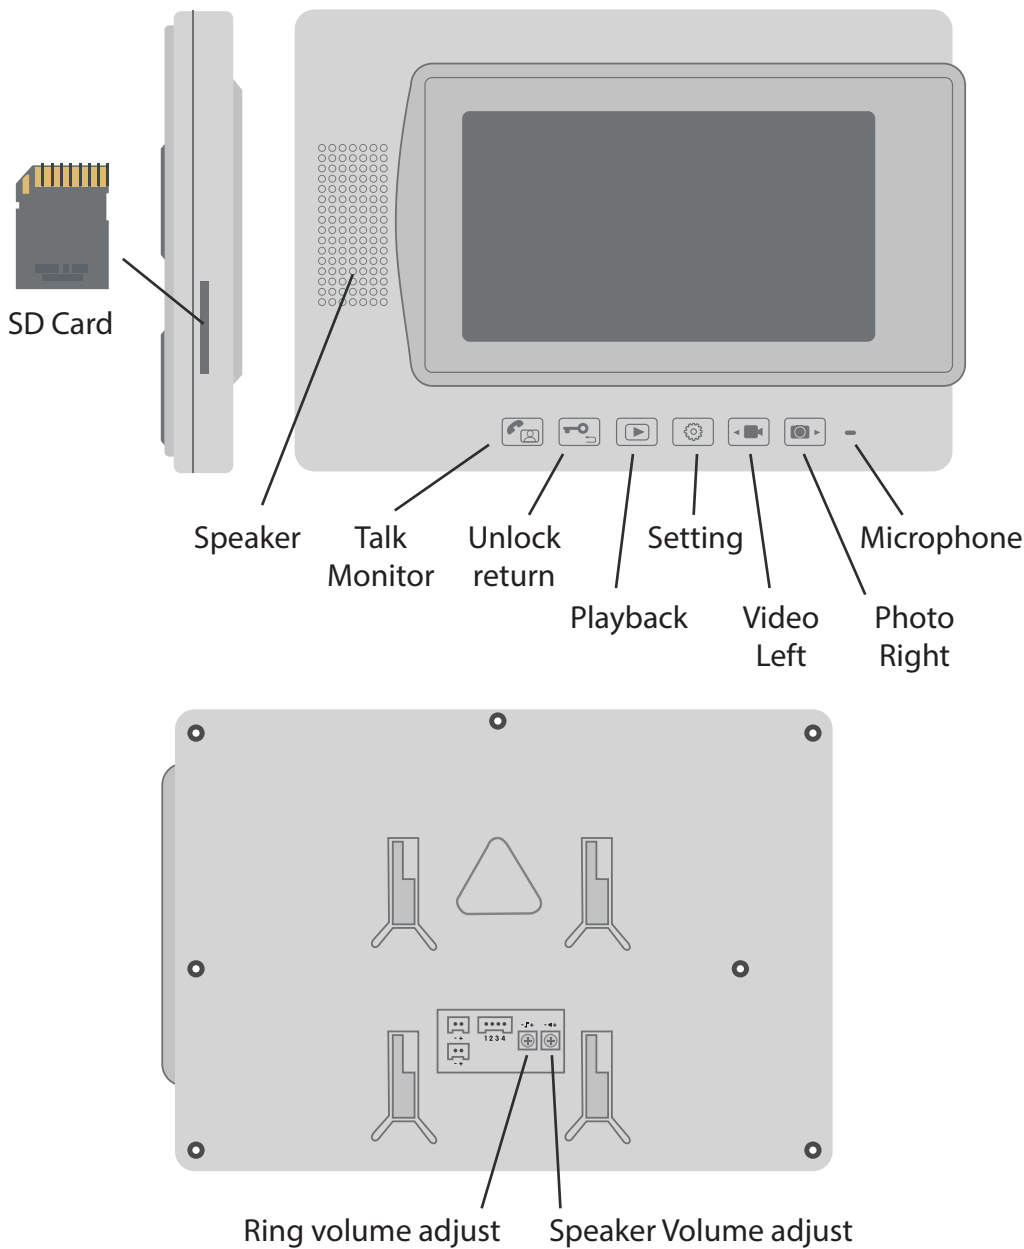

Monitor with Picture \ Video memory, setting and functioning

Main setting

- 1 Pressing calling button from the outdoor unit, indoor monitor display image.
- 2 Pressing monitoring button, indoor monitor display image.
- 3 Taking a picture automatic or automatic a 10 S video are optional (take photos or videos triangular icon flashes when prompted)

Button operation on monitor :

Monitoring interface, button operation

Playback button : View photo or video

Video button : 85 video recording (4GB SD Card) and each on lasts 10S, when it is full, it will replace circulating.

Image button : Take one picture

Monitoring button : Standby

Back button : returns to the calendar interface

Enter the menu interface, button operation

Video button : right

Image button : left

Monitoring button : to confirm entry

Back button : Returns to the previous menu

Playback button : View photo or video

Parameter / Description

LCD Driver / 800X480

Photo format / JPEG Standard

Video encode / MJPEG standard, AVI file

The video input / CVBS analog video input

FLASH memory / 2 MB Flash, store 50 pictures (replace circulating).

TF/SD card storage / Default SD card 4GB

(maximum support 32GB)

Length of a single video file / 10 seconds

Working voltage / DC15V +- 1V


Operating Current / 330mA

Start-up time / 1 second


Working temperature -35 °C ~ +55 °C


Outdoor unit installation

Night vision : Distance more than 2 meter
Working temperature : -35 C ~55 C
Camera : HD resolution 700 TVL
Imaging sensitivitiy : 0.5 Lux
Camera Angle : 70 degrees
Dimension : 173 X 98 X 38 mm
Size with rain cover : 180 x 106 x 55mm

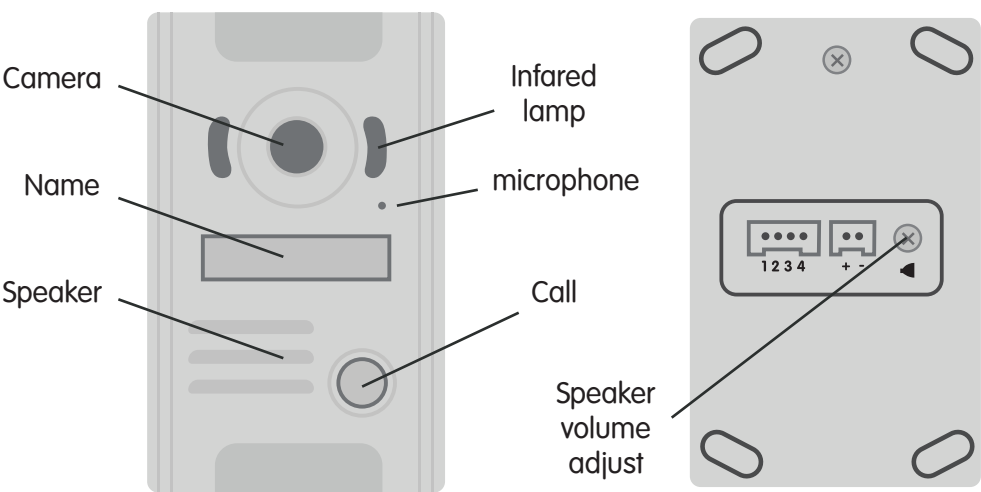



Camera installation location

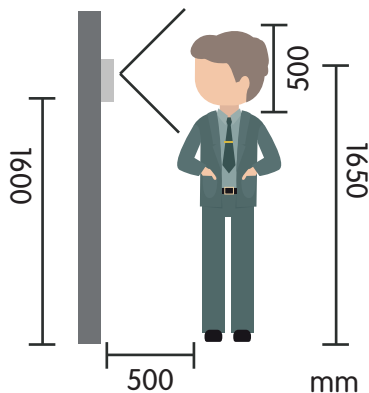

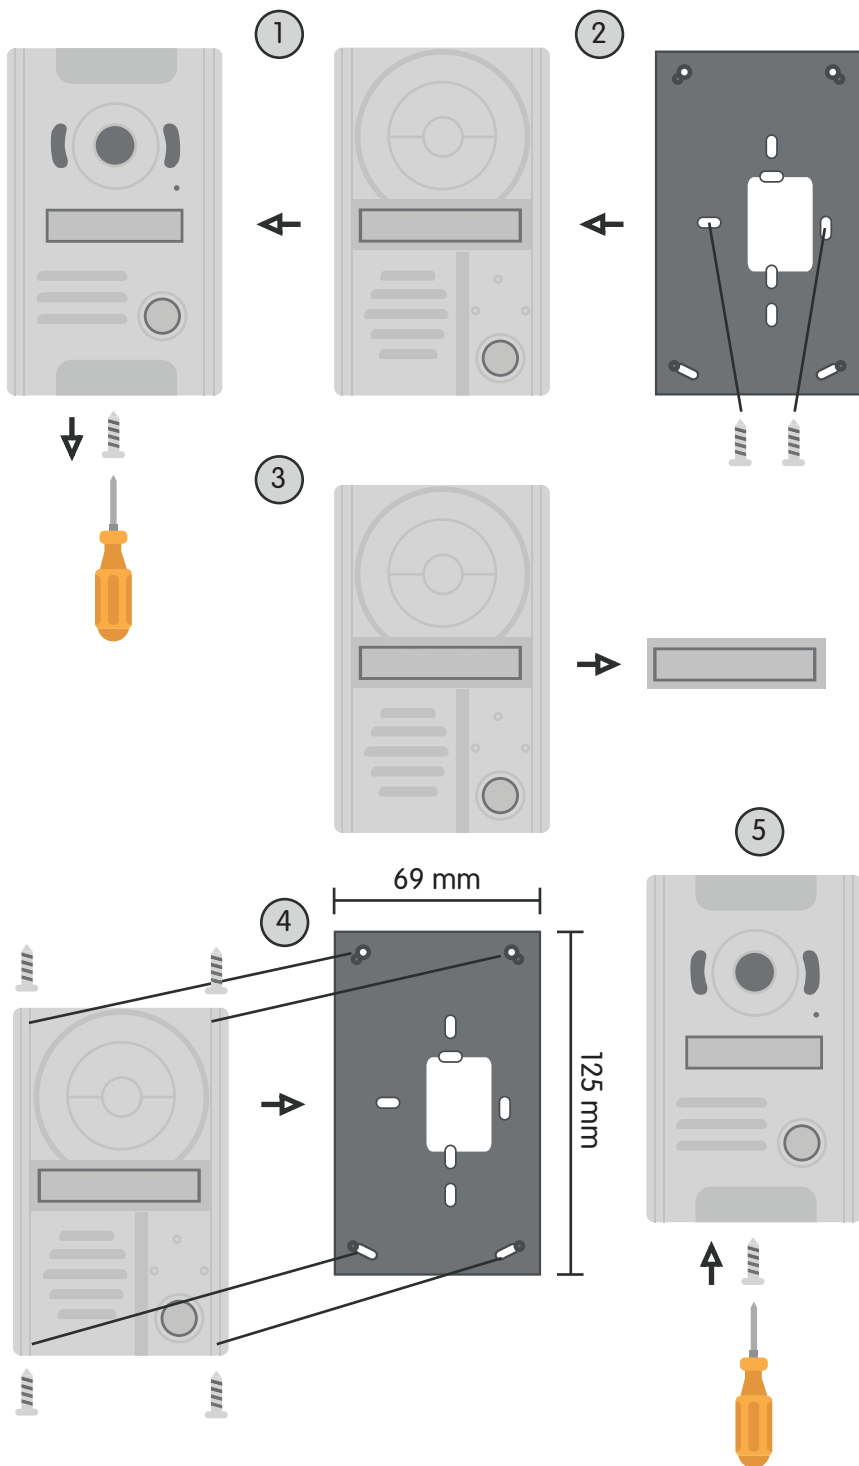


Wiring Diagram

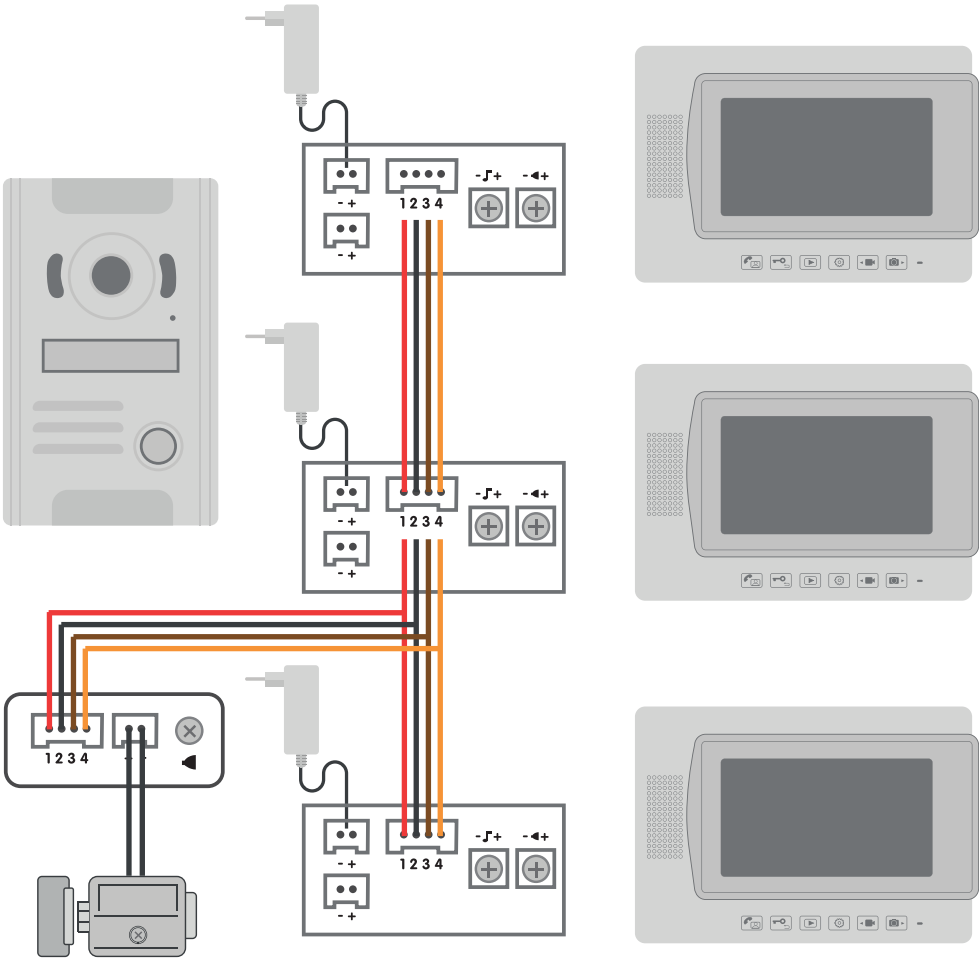

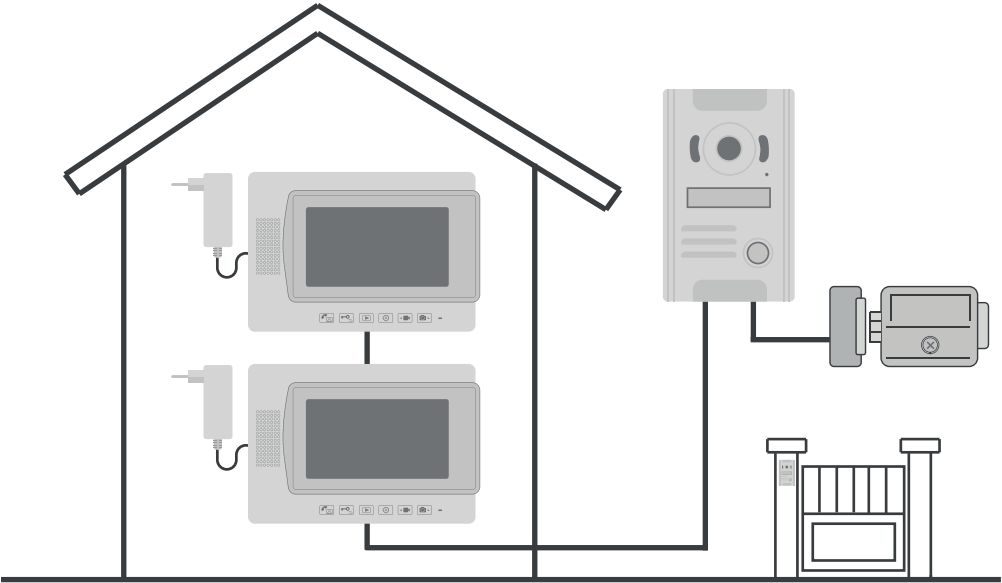


Signals and colors

Video Doorphone can be used with all the receivers from the Jenile range.

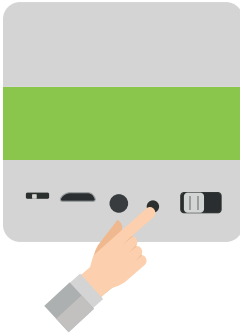


if you need to be alerted to the video doorphone, the cube, the flash plug, will turn green.

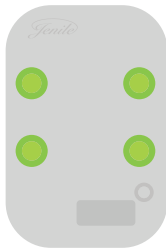

GREEN and medium vibrations (x2 with 5 repetitions) : Bells

- Door bells
- Video bells
- Video Gate
- Acoustic transmitter
- Call button, ...

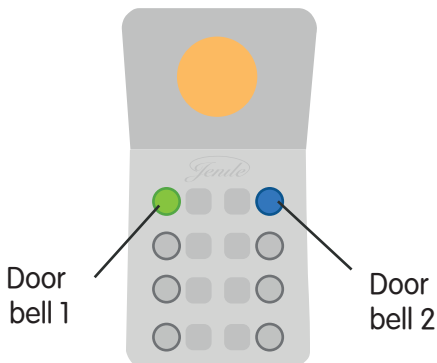

If you choose to equip yourself with 2 different door bells you can also differentiate the alerts thanks to the fixed flash 8 diodes



www.jenile.com

