

Use

- 1.** When the visitor presses the bell **button (M)**, the bell sounds, and the signal is sent directly to the Jenile receivers. The video door screen turns on automatically to see who is outside and a picture is taken and saved on the SD card.
- 2.** To wake the door from sleep mode, press the power **button (J)**.
- 3.** To take a video from the outside, press the record **button (B)** to record a one-minute video. You can stop recording at any moment by pressing the **button again (B)** or the start button (J).
- 4.** To view the recorded photos and videos, press the play **button (C)** and navigate with the **up (E)** and **down (F)** arrows. To read a video, press the start button (J). Delete photos and videos by pressing on the record **button (B)**.
- 5.** In operating mode, the arrows **up (E)** and **down (F)** allow you to zoom in and out.
- 6.** Press the settings **button (D)** to access the menu


Contact Us

For any further question, do not hesitate to contact us on video:

- Skype : Jenile-international

From Tuesday to Friday from 10 am to 12.30 pm
and from 2 pm to 6 pm


- mail : contact@jenile.com

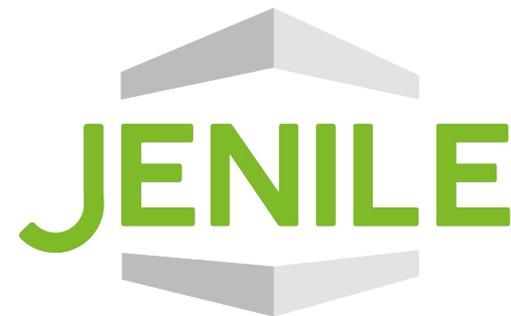

Instruction Manual


Visio Door VSP15

Specially designed for deaf and hearing impaired people

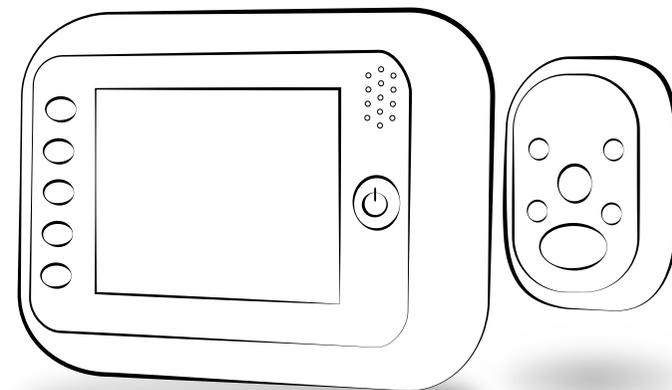

All your products sent together are already connected to each other.

The Content of your package

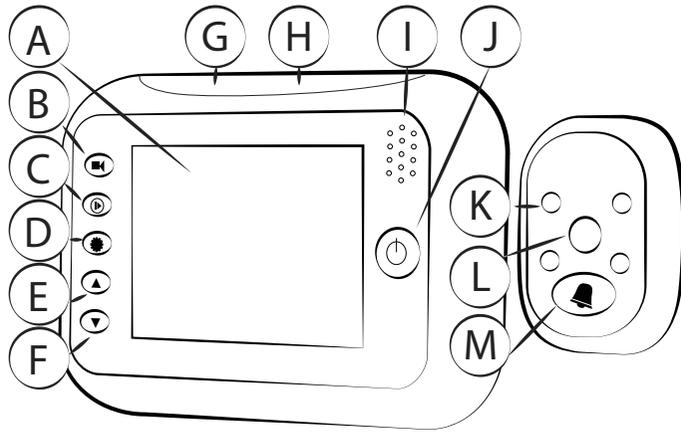

- A:** LCD Screen 3,5 pouces
- B:** Record button
- C:** Playing back recorded photos and videos
- D:** Settings
- E:** Up key
- F:** Down key
- G:** Micro SD port
- H:** 6V DC power supply
- I:** Speaker
- J:** On (ON / OFF button)
- K:** LED light for night vision (4)
- L:** 120 ° wide angle camera
- M:** Doorbell

Technical Specifications

Easy and easy installation

Doorbell dimensions: 62 x 46 x 11 mm

Screen dimensions: 138 x 76 x 23 mm

Power supply: 4 AA batteries (not included) or 6V DC power

Battery: considerate icon for low battery

Screen: 3.5 inch LCD screen

Camera: High Definition 120 ° Wide Angle Camera

Infrared LED: 4 night vision LEDs, automatic ignition when the light drop

Bell: 32 different ringtones available
Micro SD: SD card support up to 32G
Language: 8 languages available
Zoom: Continuous zoom variation
Pictures / Videos: automatic take and SD card recording at each press the bell button

2 years warranty

Principle of operation

A signaling system consists of at least one transmitter and one receiver. Jenile transmitters emit a wireless radio signal (433 MHZ) to Jenile flash or vibrating receivers.

When the doorbell is activated, it will automatically transmit a signal to the flash cube, the pocket vibrator, the flash plug and the central de gestion FF8I14.

Installation

1. Remove the protective film from the tape behind the doorbell. Insert the bell into the Juda on the outside of the door, taking care to insert the cable at the same time.

&" Remove the protective film from the adhesive strip behind the metal plate. Position the metal plate in the direction of the height at the Juda, notches up, taking care to pass the cable through the rectangular notch. Using the screws provided, screw the metal plate to the bell by the round notch. Choose the length of screw corresponding to the thickness of your door.

' " Insert the 4 AA batteries into the back of

the screen.

(" Connect the cable to the back of your screen.

) " Insert the screen into the notches on the metal plate.

*** "** For added security, screw the screen with the small screw from the top. The screw will hold the screen to the metal plate to prevent it from falling in the event of door slamming.

Using the menu

To access the menu, press the settings key (D).

Navigate with the up (E) and down (F) keys. To select, press the Power (J) button.

- **Do not disturb:** select "on" to mute the ringer / "Off" to turn on the ringing sound
- **Language:** choose your language
- **Sound type:** Choose from 32 ringtones
- **Volume:** select "up", "medium", "low" for sound level
- **Auto Sleep:** Select "10s", "20s" or "30s" before the screen goes into sleep mode automatically
- **Format a disc:** select "yes" to format your SD card, "cancel" to cancel formatting
- **Date and time:** select the type of time and date display (French or English)
- **Frequency:** select "50Hz" or "60Hz" (we recommend a 60Hz display)
- **LCD contrast:** select "up", "Medium" or "low" (we advise you to select "medium")
- **Default settings:** Resets the default video door settings
- **Software version:** the version can not be modified